


MARGO

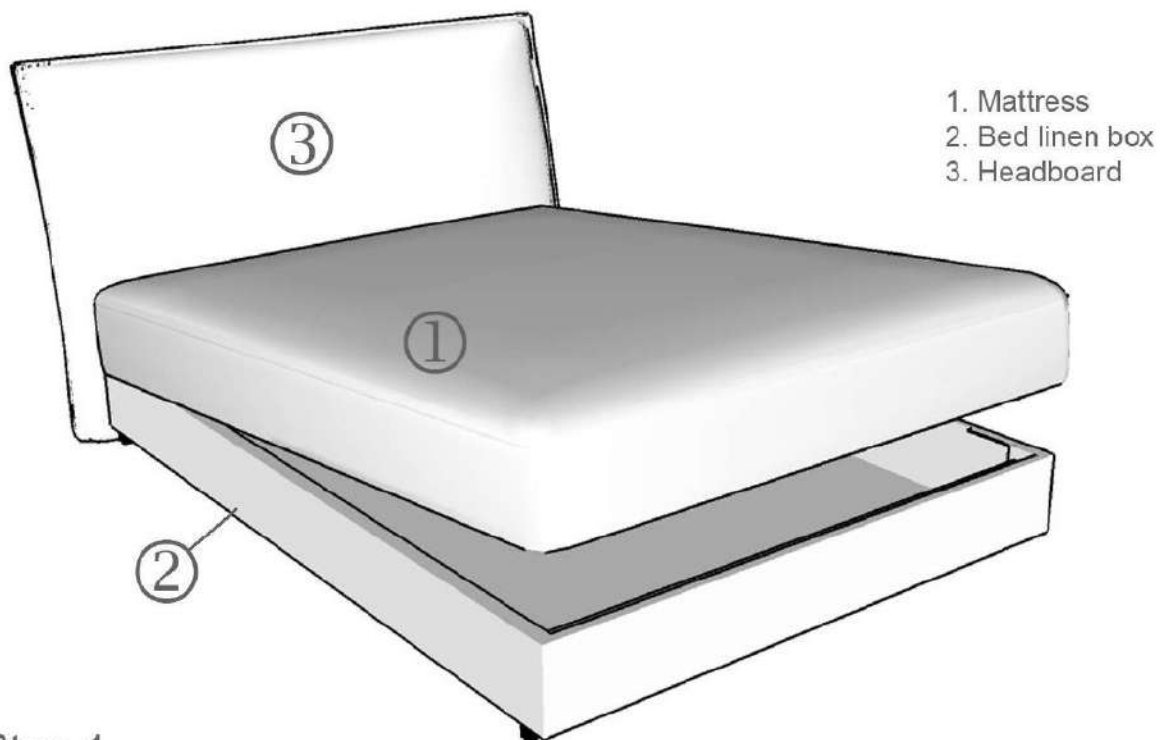

Step 1.

Put headboard in vertical position and align metal connectors on headboard in line with metal connectors on bed linen box. Slide headboard down so metal connectors connect

